


# Aurora Design Quick Start Guide

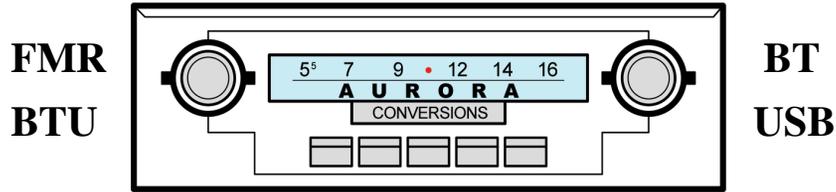

## Basic Radio Control Actions

- |  |   |
|--|---|
|  Virtual Fader            |  Virtual Balance       |
|  Loudness / EQ*<br>On/Off |  AVC Toggle*<br>On/Off |

## Bluetooth/USB Control Actions

- |   |  |
|---|--|
|  Pair/Voice Command<br>Conference Call |  Pause/Play Music<br>Mute/Unmute Call |
|  Next Song<br>Accept Call              |  Previous Song<br>Reject Call         |
|  Next Album<br>(USB sequential)       |  Previous Album<br>(USB sequential)  |

## Status Voice Assist Action

-  In radio mode, this action will announce the frequency and optionally the channel ID for the current station. In other modes it will announce which input is currently active. (Aux/BT phone-streaming/USB)

## Seek/Scan Actions (motorized tuner)

- ↓ Seek  ↓↓ Scan

When in radio mode, press the Seek button once to seek to the next station. Double press the Seek button to start a scan. The radio will scan to the next station, pause and then continue until any button/action is executed.

## Auto Scan Action (standard tuner)

-  Start Scan     Stop Scan     Cancel Scan

When in radio mode, double twist the tuning knob to start a scan. (The dial pointer will not move while scanning) To stop on a station, turn the tuning knob. The station will be temporarily stored. To find the actual station on the dial, turn the tuning knob within 5 seconds of stopping the scan. When turning the dial in the correct direction, the radio will mute until the station is found.

## Advanced Actions

-  **Signal Strength:** In radio mode, While the *Voice Assist HD* is speaking the station information, performing this action again will start a Signal Strength readout. To end, perform action again or tune off station.
-  **Version:** This action will announce the firmware version of the FMR and any installed option cards.

## Optional Seek Button Actions\*\*

- |                                    |   |
|------------------------------------|---|
| ↓ Voice Command<br>Conference Call | ↓ Pause/Play Music<br>Mute/Unmute Call  |
| ↓ Next Song<br>Accept Call         | ↓↓ Previous Song<br>Reject Call         |
| ↓↓ Next Album<br>(USB sequential*) | ↓↓↓ Previous Album<br>(USB sequential*) |

- ↓ Quick press    ↓ Press 1 second    ↓↓ Press & hold

\*\* On signal seeking radios, once in the Bluetooth or USB mode, the seek button (Wonderbar) can be used to control the radio. On Town & Country radios, each button will perform the actions on each side of the chart above.

\* See Advanced Features Guide

**Note:** To perform an Action, smoothly twist the control forward and back in a continuous motion as shown by the arrows, repeating for the number of arrows shown.